



Tioga Backpacker™

Instructions apply to Part Number 9273A827C

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, do not position the door of tent into the wind.

(2) Main
Tent Poles

(1) Rainfly
Pole

POLE ASSEMBLY PARTS


Part No. 9273A2231

Part No. 9273A2241

Rainfly Part No. 9273A2221


1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with door facing desired direction. (illus. 1)
- Unzip door.
- Stake down tent corners only, using the rings at the end of the stake loops. Keep the floor taut. (illus. 2)
- Assemble frame poles by interlocking shock-corded poles. This will make two long poles.
- Insert the poles diagonally into pole sleeves. The center of the poles should cross forming an "X" in the middle of tent. (illus. 1)

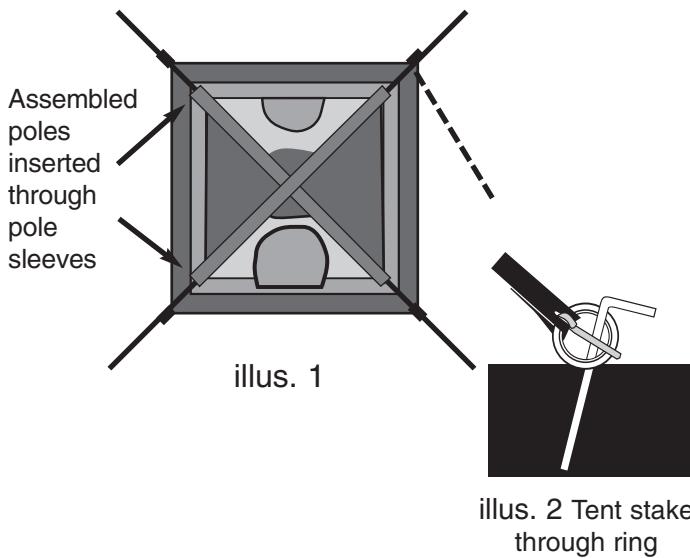


2 Connect Frame to Tent

- Insert one end of main tent pole end onto pin of pin & ring system, at tent corner. (illus. 3)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole.

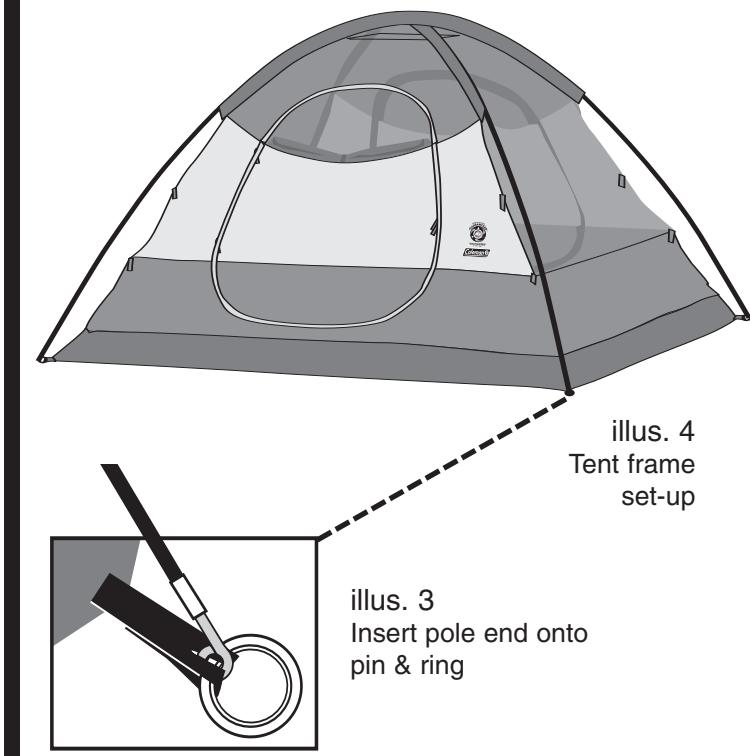


3 Attach Tent to Frame Using Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 5), (illus. 6)
- Make any adjustments to the tent corner stakes that are needed.

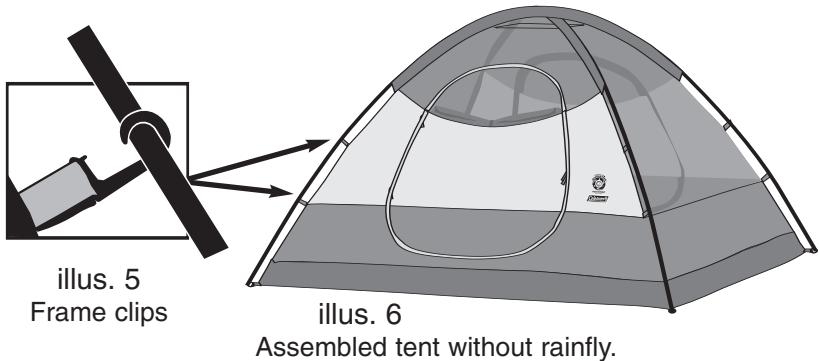

4 Attach Rainfly

- Assemble rainfly pole by interlocking shock-corded pole.
- Insert rainfly pole into reinforced pockets located at the center edges of the underside of rainfly. (illus. 7 & 8)
- Tie underside of rainfly to the rainfly pole with frame ties. (illus. 8)
- Drape rainfly over tent frame, pole side down. Rainfly pole should point out over front and back doors of tent.
- Connect the four elastic loops with "S" hooks, (found at the rainfly corners) to the four rings located at the end of the stake loops at the corners of the tent. (illus 8 & 9)
- Secure rainfly with tent frame ties located on underside of fly. (illus. 8)
- Extend out front & rear vestibules and stake out.
- Stake out four tent guylines found at the corners of the rainfly. (illus. 8)
- Stake out two side guylines found on the sides of the rainfly.
- Gear loft attaches inside tent with toggle & loop closures.

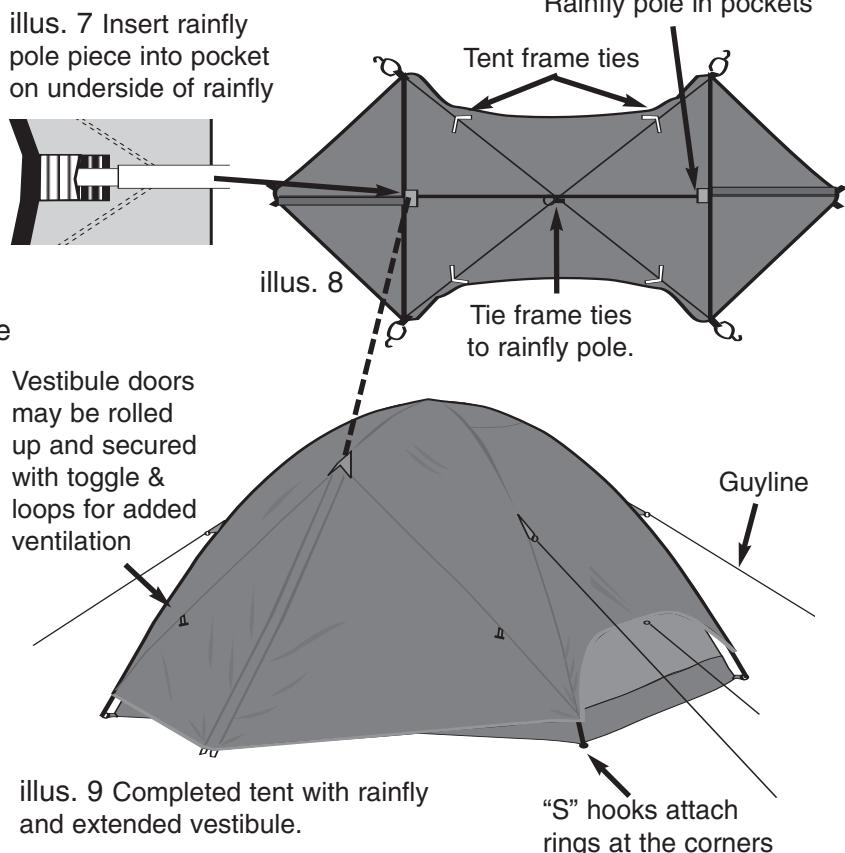

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. For additional protection we recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage nylon material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



IMPORTED BY
SUNBEAM CORPORATION (CANADA) LIMITED
DOING BUSINESS AS JARDEN CONSUMER
SOLUTIONS

5975 Falbourne Street, Mississauga, Ontario
1-800-387-6161 • www.colemancanada.ca

MADE IN CHINA

Quand vous êtes prêt à monter votre tente

- Choisissez un endroit propice : de niveau et sans pierres, branches ou matières dures et pointues
- Ne la placez pas sous les arbres
- Pour obtenir les meilleurs résultats en cas de vent, mettez l'arrière au vent

2 mâts de la tente principale

1 mât du double toit

PIÈCES DES MÂTS


Pièce n° 9273A2231

Pièce n° 9273A2241

Double toit – Pièce n° 9273A2221

1 Étalez et positionnez la tente et les mâts

- Étalez et positionnez la tente en orientant la porte dans la direction désirée (ill. 1).
- Ouvrez la glissière de la porte.
- Ancrez les coins (uniquement) de la tente avec les bagues des ganses de piquet (ill. 2). Tendez bien le tapis de sol.
- Emboîtez les sections solidarisées des mâts de l'armature. Vous obtiendrez ainsi deux longs mâts.
- En diagonale, enfilez les mâts dans les passants. Ils se croiseront et formeront un «X» au milieu de la tente (ill. 1).

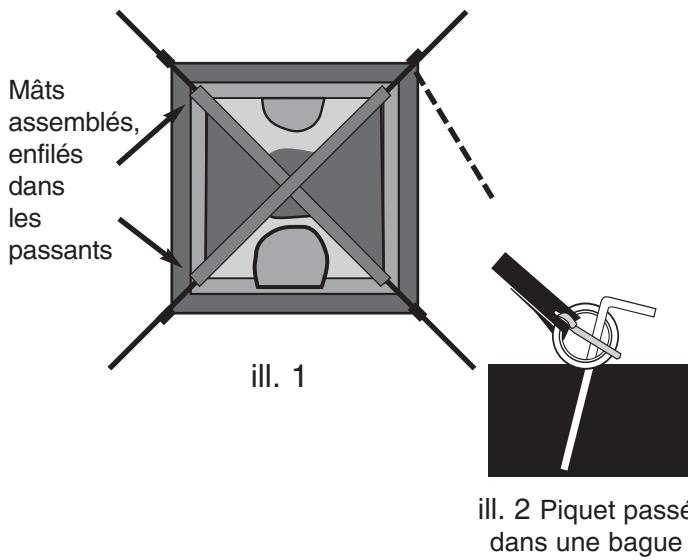


2 Fixez l'armature à la toile

- Introduisez le bout de l'un des mâts de la tente sur la cheville de l'ensemble cheville et bague, au coin de la tente (ill. 3).
- Allez à l'autre bout du mât puis arquez progressivement le mât afin de pouvoir introduire la cheville dans le mât.
- Agissez de la même façon avec l'autre mât (ill. 4).




3 Fixez la toile à l'armature à l'aide des crochets

- Fixez les crochets des bords de la toile aux mâts de l'armature (ill. 5 et 6).
- Ajustez, si nécessaire, les piquets des coins de la tente.

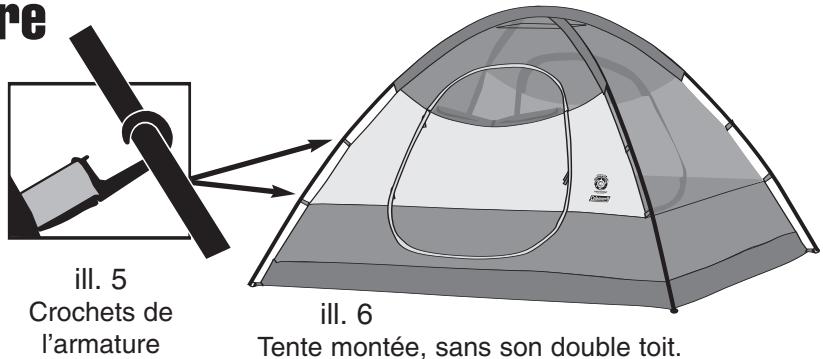

4 Attachez le double toit

- Emboîtez les sections solidarisées du mât du double toit.
- Placez les bouts du mât du double toit dans les poches renforcées qui se trouvent sur l'envers du double toit, près du sommet des absides. (ill. 7, 8).
- Attachez l'envers du double toit au mât du double toit avec le lien (ill. 8).
- Étalez le double toit sur l'armature, le mât étant dessous. Le mât doit faire saillie au-dessus des portes.
- Accrochez les 4 brides élastiques dotées d'un crochet en « S » (aux coins du double toit) aux bagues des ganses à piquer des coins (ill. 8, 9).
- Fixez le double toit avec les liens se trouvant sur son envers (ill. 8).
- Déployez les absides avant et arrière et piquez-les.
- Ancrez les quatre haubans des coins du double toit à l'aide de piquets (ill. 8).
- Ancrez les deux haubans des côtés du double toit à l'aide de piquets.
- Le rangement hors-sol se fixe à l'intérieur de la tente à l'aide d'olives et de brides.

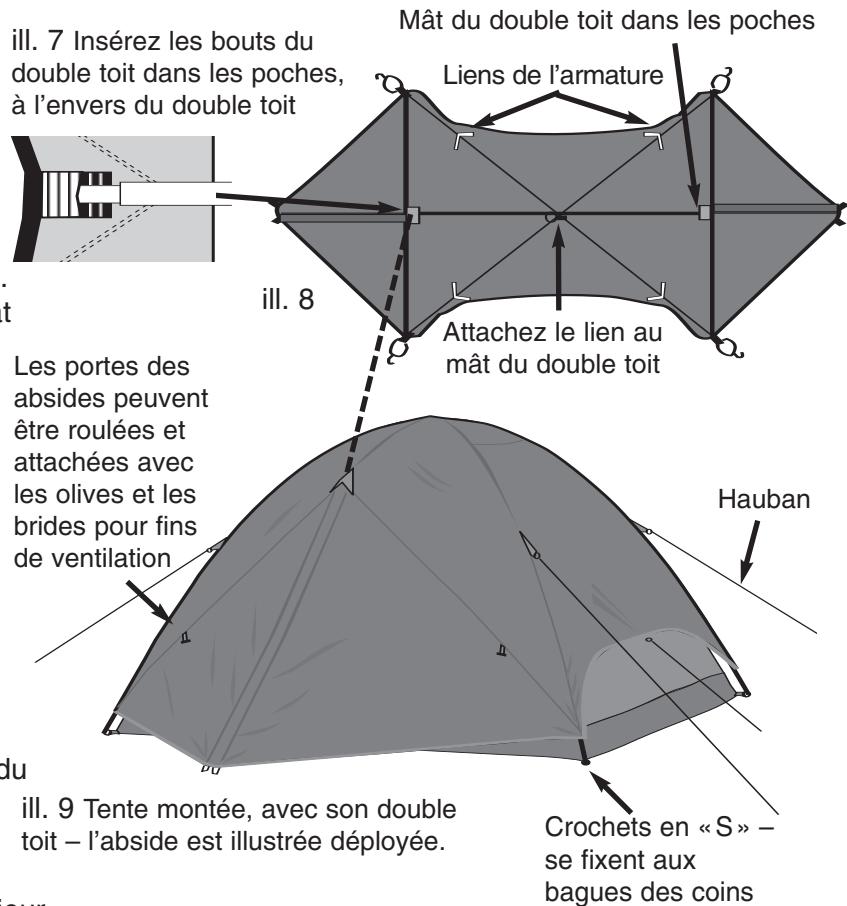

Renseignements essentiels

- Sous certaines conditions (par temps froid ou humide, par exemple) de la condensation se forme sur les surfaces intérieures de la tente. Cette condensation est causée par la vapeur d'eau provenant de la respiration, de la transpiration ou de vêtements mouillés, laissés dans la tente. Il ne s'agit ABSOLUMENT PAS d'humidité ayant pénétré la toile. Vous pouvez la minimiser en gardant les vêtements mouillés hors de la tente et en assurant une bonne ventilation en tout temps.
- Ne rangez jamais la tente, même temporairement, sans la faire totalement sécher et sans brosser la terre qui y adhère. Ne roulez jamais les piquets ou les mâts à l'intérieur de la tente, utilisez des sacs de rangement distincts.
- POUR LES DÉTERRER, TIREZ SUR LES PIQUETS MÊMES – NE TIREZ JAMAIS SUR LA TOILE OU SUR LES GANSES.
- NE RANGEZ JAMAIS LES MÂTS EMBOÎTÉS, DÉBOÎTEZ-LES.
- Aucun agent d'étanchéité n'est fourni avec la tente, bien qu'il soit essentiel de traiter les coutures avant de camper. Vous trouverez l'agent d'étanchéité requis chez votre marchand ou au magasin d'articles de sport du voisinage.

- Ne laissez pas la tente montée pendant des semaines et des semaines car le rayonnement ultraviolet risquerait de sérieusement abîmer le tissu et de le décolorer.

AVERTISSEMENT: ÉLOIGNEZ LE TISSU DE CETTE TENTE DES FLAMMES ET DE TOUTE SOURCE DE CHALEUR. Cette tente est conforme à la norme d'inflammabilité CPAI-84. Le tissu peut brûler s'il est laissé en contact continu avec une source de flamme. Appliquer toute substance étrangère sur le tissu peut neutraliser les propriétés de résistance aux flammes.



**IMPORTÉE PAR SUNBEAM CORPORATION (CANADA)
LIMITED FAISANT AFFAIRES SOUS LE NOM DE
JARDEN CONSUMER SOLUTIONS**
5975 Falbourne Street, Mississauga (Ontario)
1 800 387-6161 • www.colemancanada.ca